

GLASKIN WING ILLUSTRATED AS ON ORIGINAL TEMPLATES HERE MAY BE USED TO CUT YOUR OWN. USE 1/8" WIRE FOR STRIP AILERON LINKAGE 1" DIHEDRAL EACH TIP

1/8"x 1/4" BALSA

SHEET STAB WITH 1/16" BALSA CUT LEADING EDGE, TRAILING EDGE & TIPS FROM 1/4" SHEET



TOP BLOCKS REMOVED THIS SIDE

SERIES '72 VECO 61






1/4" SHEET DOUBLERS ON BOTH SIDES OF THE 1/4"x 3/8" FINE BEAMS

SPLIT BOTTOM BLOCK CUT TO THIS OUTLINE

1/16" PLY FALSE BOTTOM TANK FLOOR OUTLINE

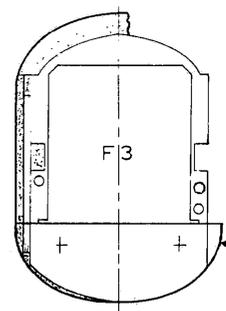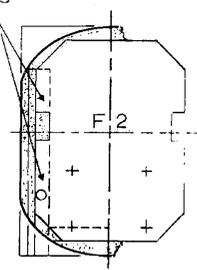

THRUST LINE
WING CENTER LINE

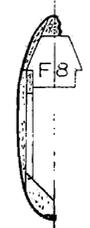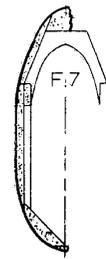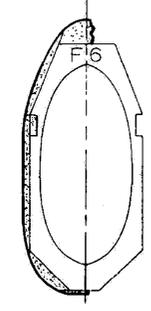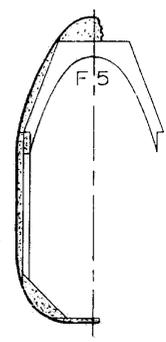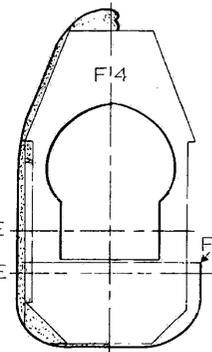

CANOPY CUT FROM DUBRO NO. 4

3/8" SHEET TOP & 1/8" SCRAP USED TO FORM TURTLE DECK

1 3/8"x 4"x 12" SOFT BLOCKS

1 1/2"x 2"x 7 1/4" BLOCK

1/4" PLY FIREWALL

BATTERY

RECEIVER

SERVOS

FREON TANK

1/8" SHEET SIDES & TURTLE DECK

COVER FIN WITH 1/16" SHEET


2 1/4" SPINNER
1/4" SHEET

1/2" TRIANGLE

1/8" BALSA DOUBLERS

HEAT & SHAPF FUEL TANK TO CLEAR NOSE WHEEL PYLON 12 OZ SLANT TANK USED

1/2" SHEET BOTTOM BLOCK IS SPLIT FOR RETRACTS & HELD ON WITH WOOD SCREWS

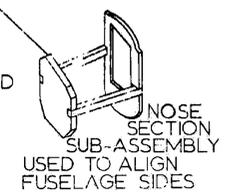

1/16" PLY GEAR DOORS

BUILD UP BELLY PAN WITH 3/8" BALSA BETWEEN F3A, & F4A

TWO PIECE FUSELAGE SIDES JOINED HERE

1/8" PLY DOUBLER OUTLINE

3/4" TRIANGLE STOCK

1/8" x 3/8" BALSA

3/32" SHEET


1/2" BALSA WING FILLETS
ALL BULKHEADS 1/8" PLY
F3A & 4A ARE 1/16" PLY

IMPORTANT!! BALANCE AIRCRAFT LATERALLY

NOTE: FROM AIR RETRACTS SHOWN WITH 1 3/4" NOSE & 2 1/2" MAIN WHEELS, MOUNT FREON VALVE TO 1/8" PLY COCKPIT FLOOR.

"FRIEND SHIP I"

DESIGNED DRAWN & INKED BY DON GUTRIDGE



ALL RIGHTS RESERVED BY DESIGNER