

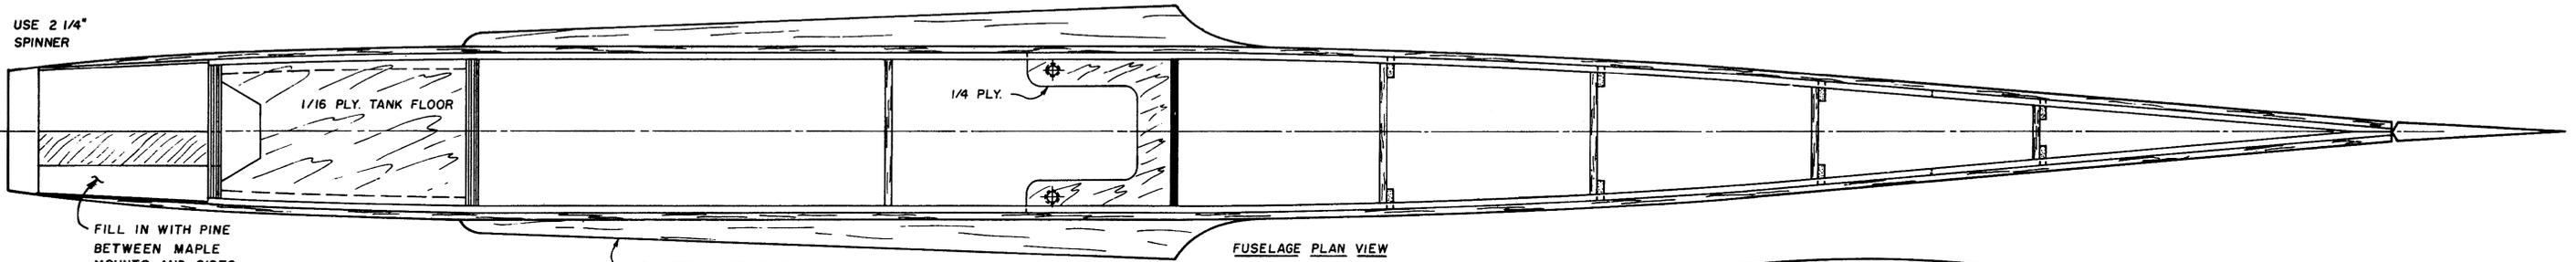




USE 2 1/4" SPINNER

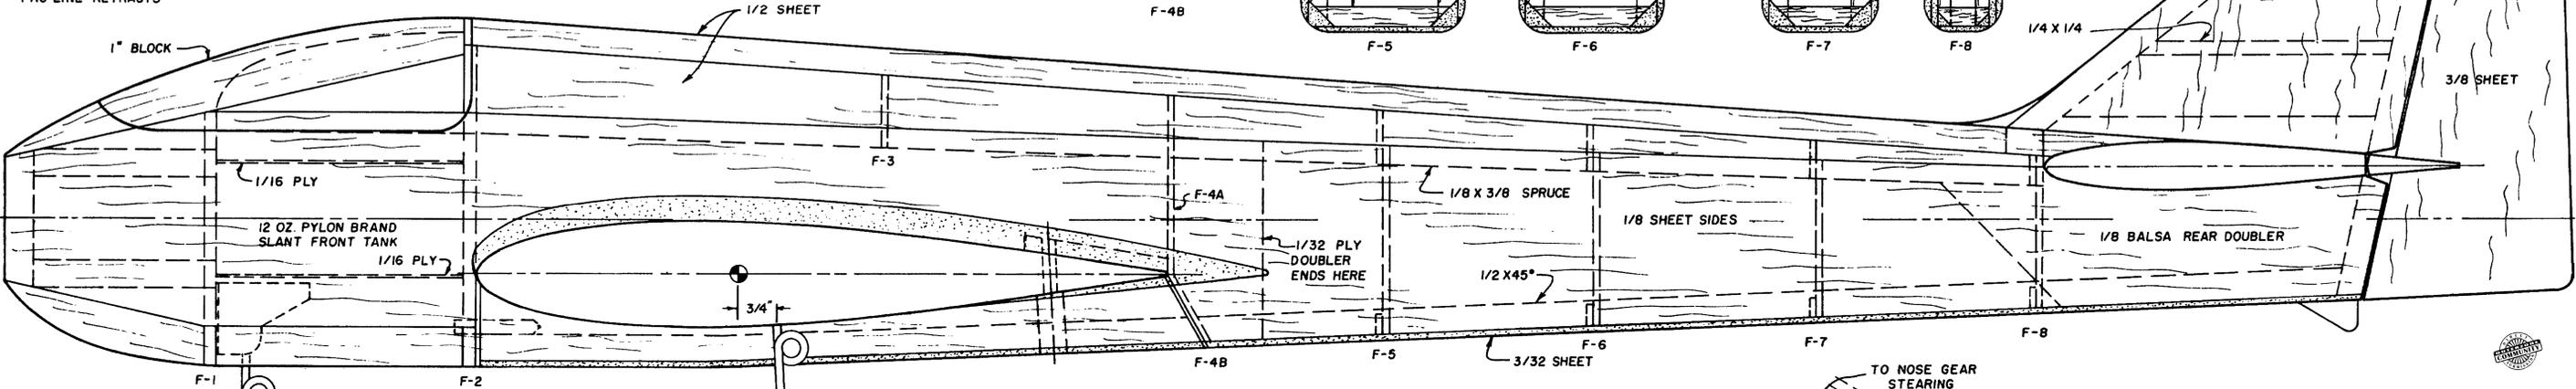

FILL IN WITH PINE  
BETWEEN MAPLE  
MOUNTS AND SIDES

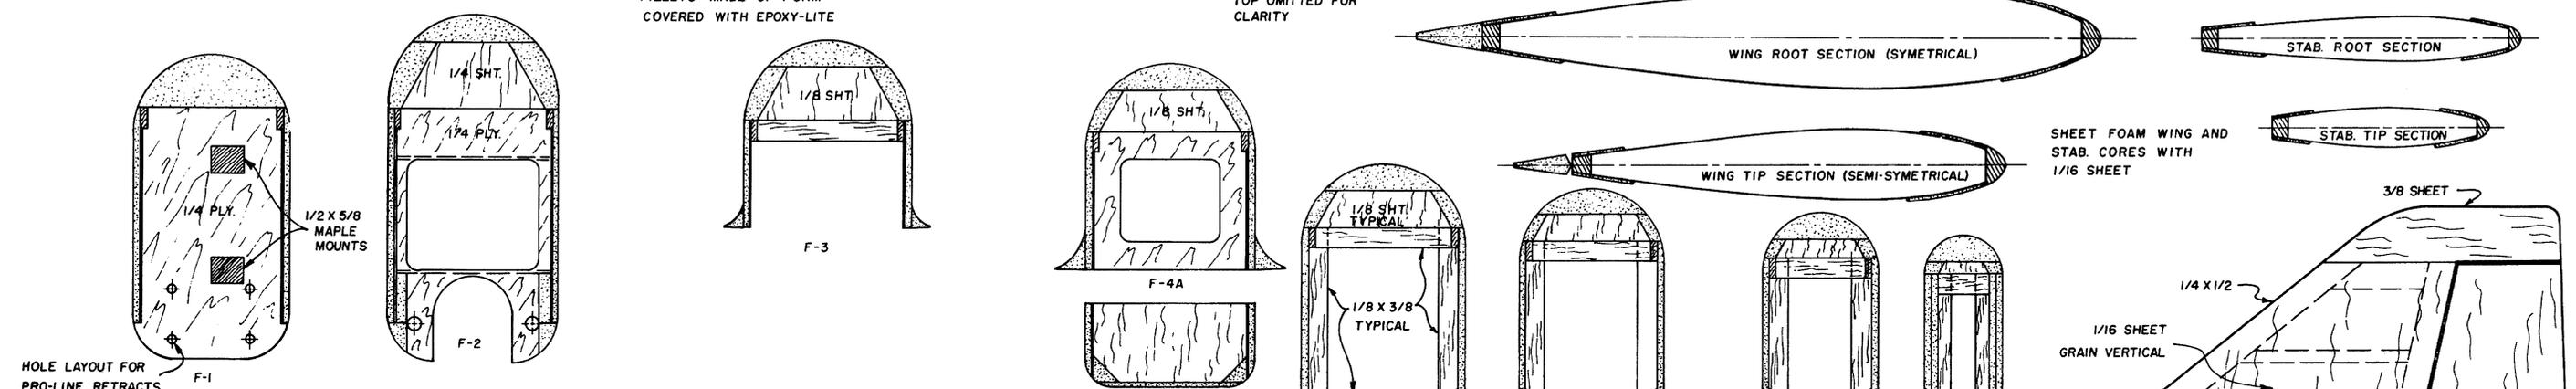


ENGINE MOUNTS ARE FOR  
WEBRA BLACKHEAD  
NO THRUST OFFSET

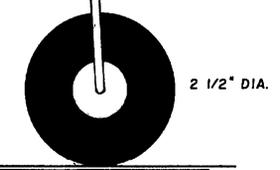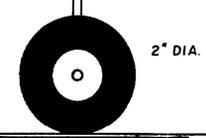

**IMPORTANT**  
WING AND STAB AT  
0° TO THRUST LINE

**CONTROL SURFACE MOVEMENTS**  
ELEVATOR - 3/8" UP & DOWN  
AILERON - 1/4" UP & DOWN  
RUDDER - 1 1/2" LEFT & RIGHT

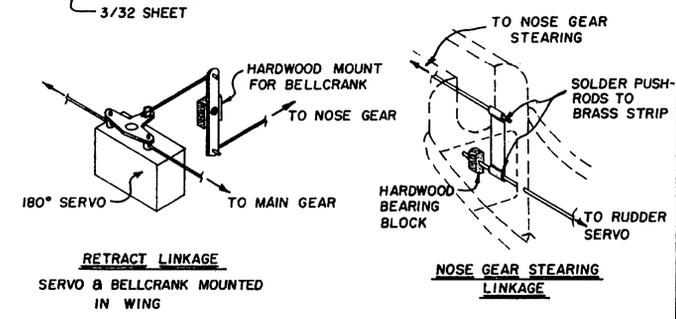

**Yankee**

DESIGNED & DRAWN BY  
**BOB NOLL**